



WAFFLE Maker



For more products please visit our website:
www.funfoodproducts.co.uk

Unit L | Penfold Trading Estate
Imperial Way | Watford | WD24 4YY | United Kingdom

HEALTH & SAFETY

The use of any electrical appliance requires the application of the following common sense safety rules.

Failure to observe these safety rules exposes the user to the risk of personal injury or the product itself to the risk of damage. These two categories are denoted by the following conventions:

WARNING: Danger to the person!
IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended for domestic use only. It should NOT be used for Commercial purposes. Such use may damage the product and will invalidate your warranty.
- The appliance must be used on a stable heat-resistant surface.
- Always locate your appliance away from the edge of a worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors, or near water.

Mains Cable

- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord.
- The mains cable should reach from the socket to the base unit without straining the connections.
- Do not let the mains cable hang over the edge of a worktop where a child could reach it.
- Do not let the cable run across an open space e.g. between a low socket and table.
- Do not let the cable run across a cooker or toaster or other hot area which may damage the cable.
- Do not use the appliance if the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Personal Safety

- WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug and or appliance in water or any other liquid.

2

- Do not place the appliance on or near heat sources such as gas or electric stoves, ovens, or burners.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and the like.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance contains no user serviceable parts. All repairs should only be carried out by a suitably qualified engineer. Improper repairs may place the user at risk of harm.
- This appliance must be disconnected from the mains power supply after use and before any maintenance such as cleaning is carried out.
- Do not immerse the appliance in water or any other liquid.
- Do not use this appliance if it has suffered a malfunction or if it has been dropped or damaged in any way.
- Do not leave the appliance unattended whilst connected to the mains power supply.

Electrical Requirements

Check that the voltage indicated on the rating plate corresponds with that of your local network before connecting the appliance to the mains power supply.

Prior to First Use

- Remove all the packing material and labels (but not the rating plate).
- Clean the surfaces with a damp cloth.
- IMPORTANT:** Grease the surfaces of the Hot Plates prior to first use. It is recommended that the first Waffles cooked with this appliance are discarded as some residual deposits may be present from the manufacturing process.
- NOTE:** The inner plates become very hot during use. Take care when handling this product especially when removing food after cooking.

Recycling

- If at any time in the future you need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

4

OPERATION

- Plug Waffle Maker into a mains power supply.
- For the ideal waffle we recommend setting the temperature dial to medium (half way between Min and Max). If you would like to make your waffles a bit crispier on the outside you can set the dial higher towards Max. If you would like to reheat some pre made waffles set the Waffle Maker to Min.
- Turn the temperature dial to your desired setting.
- Pre-heat the waffle maker.
- Close the waffle maker.
- You will notice that the red power light and the green heating light will go on, indicating that the waffle maker has begun preheating.
- It will take approximately 3 to 5 minutes to reach baking temperature. The red power light will remain on until you unplug your waffle maker. When the green light goes off, the waffle maker is ready for use.
- Before baking use a pastry brush to lightly coat the top and bottom waffle plates with vegetable oil. A light coating of non-stick cooking spray also works well.
- Open the waffle maker and pour batter to fill the lower cooking plate. If necessary, use a spatula to spread the batter into the edges of the plate.
- Close the waffle maker. Do not open for at least 1 or 2 minutes. Opening too soon will cause under-baked waffles to split, making them difficult to remove.
- We recommend a cooking time of 3 minutes, once the waffle is cooked, carefully remove them from the waffle maker with non-metallic utensils.
- To cook more waffles close waffle maker to retain heat. Always be sure the green light goes off again before making more waffles.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave the waffle maker open to cool.

HELPFUL HINTS

- The optimal amount of batter to produce a full-shaped waffle without overflowing, will vary with different waffle batters. Pouring batter from a measuring cup will help you gauge how much batter to use each time.



WAFFLE Maker



Instruction Manual FOR HOUSEHOLD USE ONLY

PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

Model No: JMW040



- WARNING:** Avoid contact with moving parts.
- Extreme caution must be observed when moving an appliance with hot contents.
- Do not use the product with wet or moist hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- WARNING:** This appliance will become hot during use. Take care to not touch the surfaces until it has cooled down.
- Switch off and unplug the appliance from the outlet when not in use and always allow to fully cool before cleaning.

Children


- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where the child cannot see properly or should not be reaching.

Other Safety Considerations for this Product

- Do not use this appliance for other than its intended use.
- Do not carry the Waffle maker by the power cord. Always pull the plug from the socket, do not pull the cord.
- This product is a CLASS I appliance and as such must be connected to an earthed supply.
- Should the fuse in the Mains Plug need to be replaced then replace only with an ASTA approved BS1362 fuse of the same rating.
- The use of accessory attachments not recommended by the manufacturer may cause damage to the unit and will invalidate your warranty.
- Do not use this appliance near to or below combustible material such as curtains.
- Where ventilation is provided on the underside of the unit do not obstruct this with cloth or other materials as this will cause overheating.
- Allow sufficient ventilation space around the unit for heat and steam to escape.
- Do not move the appliance whilst it is operating.

3

PRODUCT OVERVIEW

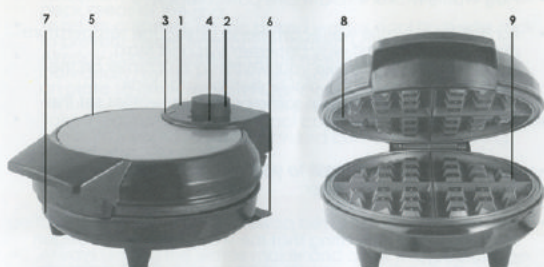

Features

- | | |
|--------------------|--------------------|
| 1. UPPER HOUSING | 2. KNOB |
| 3. POWER INDICATOR | 4. READY INDICATOR |
| 5. METAL TOP | 6. POWER COVER |
| 7. BOTTOM HOUSING | 8. UPPER PLATE |
| 9. BOTTOM PLATE | |

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the cooking plates by wiping with sponge or cloth dampened in warm water

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACE

NOTE: When your Waffle Maker is heated for the first time, it may emit a slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance. However, it may affect the flavour of the first set of waffles prepared in your waffle maker, and it is recommended that you discard these.

5

- Fill bottom grid of waffle maker with enough batter to cover peak areas of the grid.
- To retain crispness, let the baked waffles cool on a wire rack to prevent steam from accumulating underneath.
- Already cooled waffles can be re-warmed and re-crisped, individually, by returning to hot waffle maker. Place waffle on plate so grooves match up; close lid and heat for 1 to 2 minutes, watching carefully to prevent burning.
- Baked waffles freeze well. Cool completely on wire rack. Store in plastic freezer bag or in covered container, separating waffles with wax paper.
- Reheat frozen waffles in oven or toaster until hot and crisp.

CLEANING

- Always unplug the waffle maker and allow it to cool before cleaning. There is no need to disassemble the waffle maker for cleaning. Never immerse the waffle maker in water or place in dishwasher.
- Brush away any loose crumbs from the grooves. Wipe grids clean with a paper towel, absorbing any oil or butter that might be down in the grooves of the grid. You can also wipe grids with a damp cloth. Do not use anything abrasive that can scratch or damage the non-stick coating.
- Wipe the outside of the waffle maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. A little metal polish suitable for stainless steel may be used occasionally on the top housing. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Should any batter become baked onto the grids, pour a little cooking oil onto the hardened batter. Let sit for 5 minutes to soften batter, then wipe off with a paper towel or soft cloth.
- Do not use metal utensils to remove your waffles, they can damage the non-stick surface.

STORAGE

- Always unplug the Waffle Maker before storage.
- Always make sure the Waffle Maker is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.